


Main Parts Breakdown

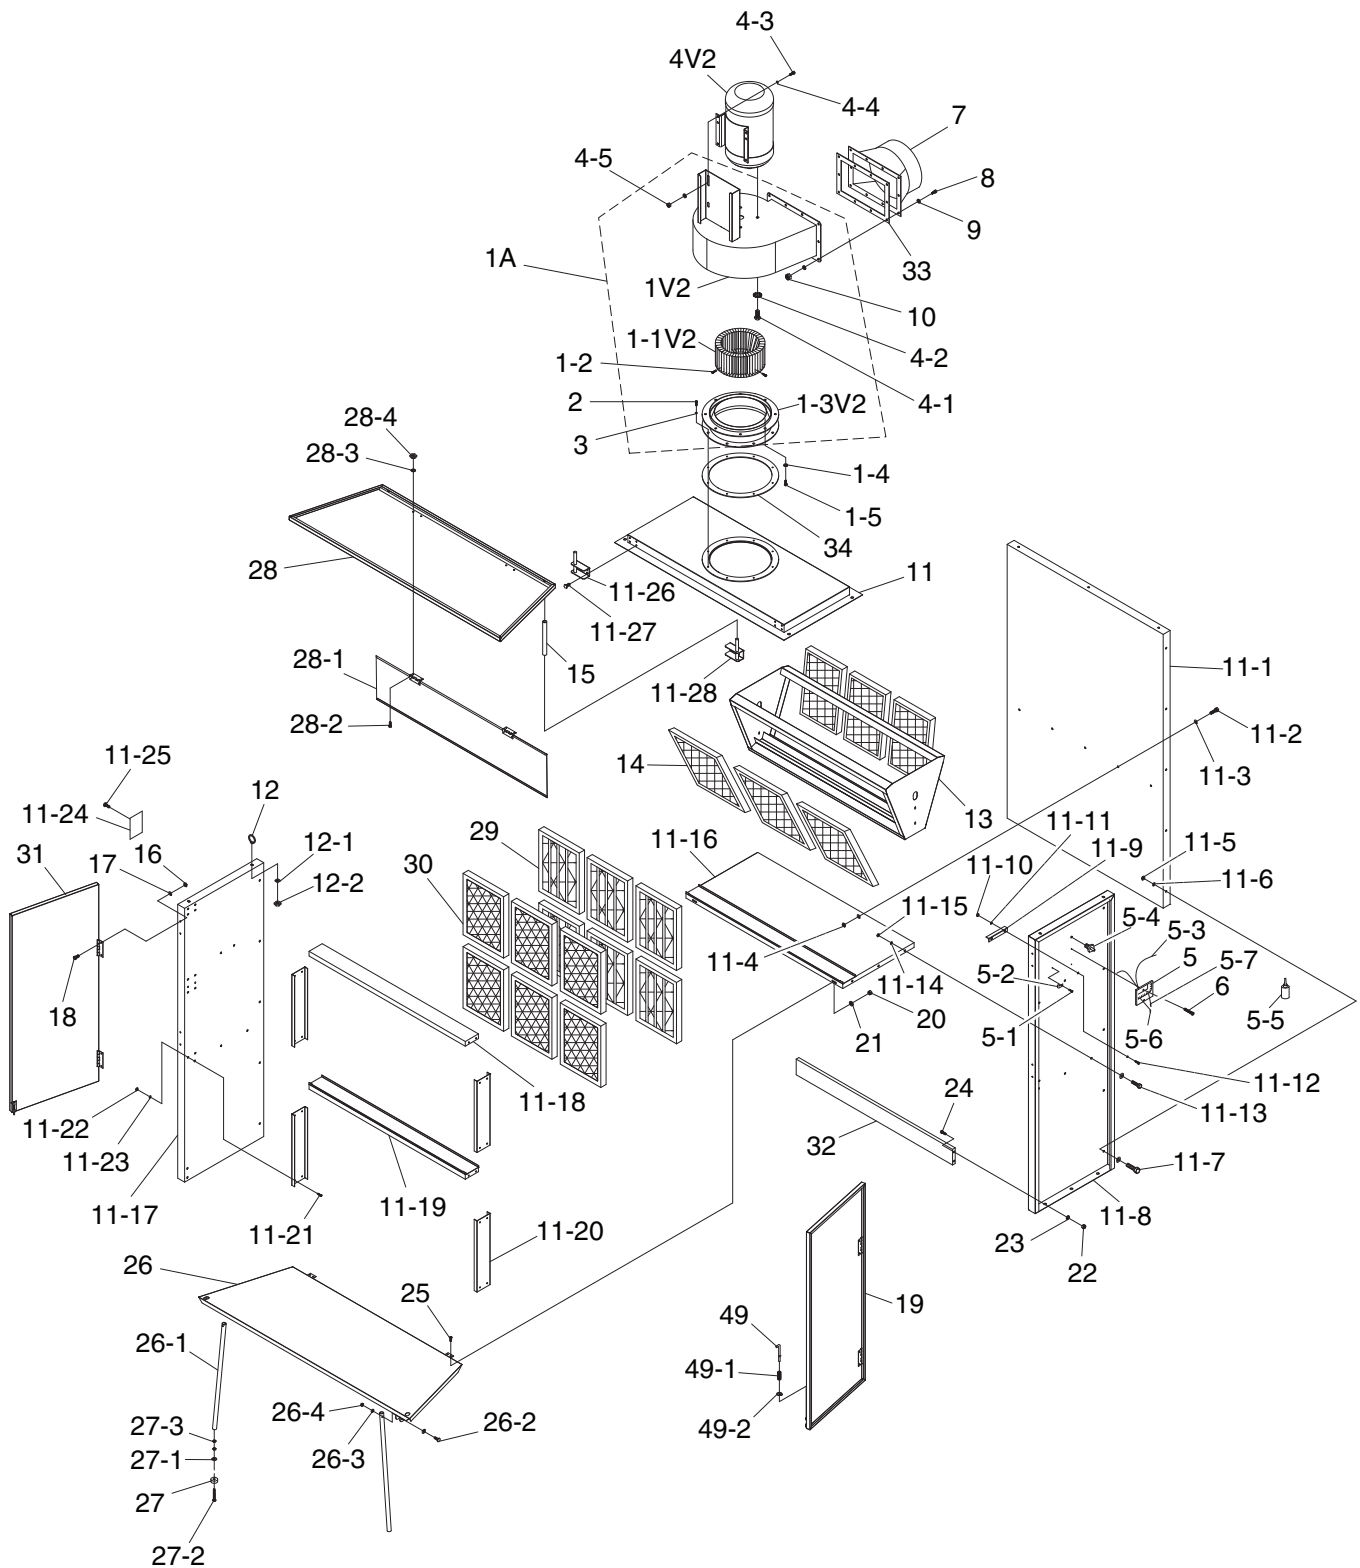

Main Parts List

REF	PART #	DESCRIPTION
1AV2	P0533001AV2	BLOWER HOUSING ASSY V2.03.11
1V2	P0533001V2	BLOWER HOUSING V2.03.11
1-1V2	P0533001-1V2	IMPELLER 12" V2.03.11
1-2	PB21	HEX BOLT 3/8-16 X 3/4
1-3V2	P0533001-3V2	INTAKE PORT V2.03.11
1-4	PW07	FLAT WASHER 5/16
1-5	PB07	HEX BOLT 5/16-18 X 3/4
2	PB03	HEX BOLT 5/16-18 X 1
3	PW07	FLAT WASHER 5/16
4V2	P0533004V2	MOTOR 3HP 230V 1PH T3C V2.03.11
4-1	PB52	HEX BOLT 1/2-13 X 1
4-2	PTLW04	EXT TOOTH WASHER 1/2
4-3	PB18	HEX BOLT 3/8-16 X 1
4-4	PW02	FLAT WASHER 3/8
4-5	PN08	HEX NUT 3/8-16
5	P0533005	AIR FILTER INDICATOR
5-1	PHTEK39M	TAP SCREW M4 X 12
5-2	P0533005-2	CLIP PLASTIC
5-3	P0533005-3	TUBING
5-4	P0533005-4	TUBING CONNECTOR FITTING
5-5	P0533005-5	RED GAUGE OIL
5-6	P0533005-6	RED ARROW
5-7	P0533005-7	GREEN ARROW
6	PHTEK46M	TAP SCREW M4 X 45
7	P0533007	OUTLET 12"
8	PB03	HEX BOLT 5/16-18 X 1
9	PW07	FLAT WASHER 5/16
10	PN02	HEX NUT 5/16-18
11	P0533011	COVER TOP
11-1	P0533011-1	BACK COVER
11-2	PB21	HEX BOLT 3/8-16 X 3/4
11-3	PW02	FLAT WASHER 3/8
11-4	PN08	HEX NUT 3/8-16
11-5	PN08	HEX NUT 3/8-16
11-6	PW02	FLAT WASHER 3/8
11-7	PB21	HEX BOLT 3/8-16 X 3/4
11-8	P0533011-8	COVER RIGHT
11-9	P0533011-9	FILTER CASE BRACE
11-10	PN02	HEX NUT 5/16-18
11-11	PW07	FLAT WASHER 5/16
11-12	PB07	HEX BOLT 5/16-18 X 3/4
11-13	PB21	HEX BOLT 3/8-16 X 3/4
11-14	PW02	FLAT WASHER 3/8
11-15	PN08	HEX NUT 3/8-16
11-16	P0533011-16	FILTER CASE BASE
11-17	P0533011-17	COVER LEFT
11-18	P0533011-18	TOP FILTER CASE SUPPORT
11-19	P0533011-19	FILTER CASE SUPPORT MIDDLE




REF	PART #	DESCRIPTION
11-20	P0533011-20	SIDE FILTER CASE SUPPORT
11-21	PHTEK34	TAP SCREW 1/4 X 1/2
11-22	PN05	HEX NUT 1/4-20
11-23	PW06	FLAT WASHER 1/4 IN
11-24	P0533011-24	SWITCH BASE
11-25	PHTEK39M	TAP SCREW M4 X 12
11-26	P0533011-26	CURTAIN BRACE LEFT
11-27	PB07	HEX BOLT 5/16-18 X 3/4
11-28	P0533011-28	CURTAIN BRACE RIGHT
12	P0533012	HOOK 3/8-16
12-1	PW02	FLAT WASHER 3/8
12-2	PN08	HEX NUT 3/8-16
13	P0533013	FILTER CASE
14	P0533014	5 MICRON THIRD STAGE FILTER
15	P0533015	CONNECTOR BAR
16	PN05	HEX NUT 1/4-20
17	PW06	FLAT WASHER 1/4 IN
18	PFH04	FLAT HD SCR 1/4-20 X 5/8
19	P0533019	RIGHT STEEL CURTAIN
20	PN05	HEX NUT 1/4-20
21	PW06	FLAT WASHER 1/4 IN
22	PN05	HEX NUT 1/4-20
23	PW06	FLAT WASHER 1/4 IN
24	PFH04	FLAT HD SCR 1/4-20 X 5/8
25	PFH04	FLAT HD SCR 1/4-20 X 5/8
26	P0533026	WORK TABLE
26-1	P0533026-1	WORK TABLE LEG
26-2	PB06	HEX BOLT 5/16-18 X 2
26-3	PW07	FLAT WASHER 5/16
26-4	PN02	HEX NUT 5/16-18
27	P0533027	LEG CUSHION 3/8"
27-1	PW02	FLAT WASHER 3/8
27-2	PB60	HEX BOLT 3/8-16 X 3
27-3	PN08	HEX NUT 3/8-16
28	P0533028	CURTAIN TOP STEEL
28-1	P0533028-1	CURTAIN TOP SMALL
28-2	PHTEK34	TAP SCREW 1/4 X 1/2
28-3	PW06	FLAT WASHER 1/4 IN
28-4	PN05	HEX NUT 1/4-20
29	H5838	10 MICRON SECOND STAGE FILTER
30	H5837	30 MICRON FIRST STAGE FILTER
31	P0533031	LEFT STEEL CURTAIN
32	P0533032	SUPPORT BAR
33	P0533033	OUTLET GASKET
34	P0533034	INLET GASKET
49	P0533049	DOOR LATCH PIN
49-1	P0533049-1	COMPRESSION SPRING
49-2	P0533049-2	SPRING RETAINER



Safety Label Placement and Parts List

⚠️ WARNING

Safety labels help reduce the risk of serious injury caused by machine hazards. If any label comes off or becomes unreadable, the owner of this machine **MUST** replace it in the original location before resuming operations. For replacements, contact (800) 523-4777 or www.grizzly.com.

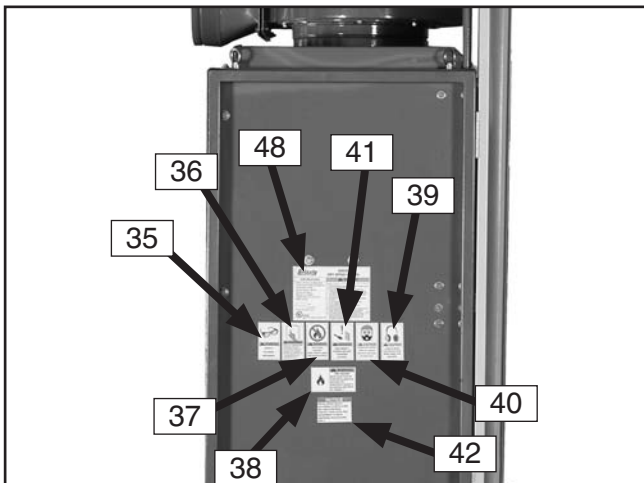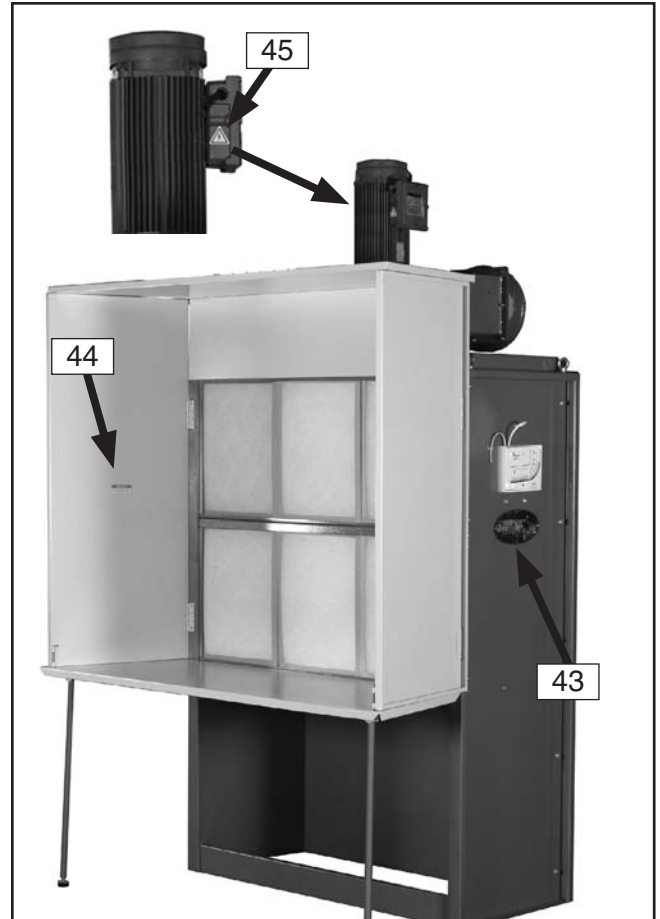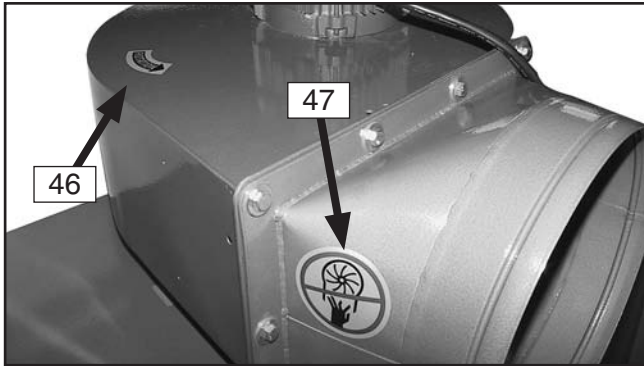

REF	PART #	DESCRIPTION
35	PLABEL-11	SAFETY GLASSES VL
36	PLABEL-12A	READ MANUAL VL
37	P0532068	EXPLOSION HAZARD LABEL
38	P0532063	FIRE HAZARD LABEL
40	PLABEL-15	EAR PROTECTION VL
41	P0533041	UNPLUG FILTER CHANGE LABEL
42	P0532067	NOTICE REGULATIONS LABEL

REF	PART #	DESCRIPTION
43	G8589	GRIZZLY NAMEPLATE-LARGE
44	P0532074	NOTICE FILTERS LABEL
45	PLABEL-14	ELECTRICITY
46	P0532073	ROTATION DIRECTION LABEL
47	P0533047	IMPELLER HAZARD LABEL
48	P0533048	MACHINE ID LABEL

