







REF	PART #	DESCRIPTION
001	P1012001	UPPER FRAME ARM
002	P1012002	LOCK KNOB
003	P1012003	SWITCH PLATE
004	P1012004	GUIDE POST
005	P1012005	SUPPORT BRACKET 7/8" I.D.
06A	P1012006	THUMB SCREW 1/4"-20 X 3/8"
007	P1012007	GUIDE BLOCK HOLDER
008	P1012008	ROUND GUIDE BLOCK
009	PB51	HEX BOLT 1/4"-20 X 3/8"
010	PW06	FLAT WASHER 1/4"
011	PB05	HEX BOLT 1/4"-20 X 3/4"
012	P1012012	GUARD PLATE
013	P1012013	HEX SHAFT
014	P6200	BALL BEARING 6200
015	PR01M	EXT RETAINING RING 10MM
016	P1019Z033	BLADE ADJUSTING SCREW
017	P1012017	UPR WHEEL SLIDING BRKT
018	P1012018	SPRING
019	P1019017	SQUARE NUT 3/8"-16
020	P1019018	ADJUSTMENT KNOB
021	PN02	HEX NUT 5/16"-18
022	PB51	HEX BOLT 1/4"-20 X 3/8"
024	P1019021	STEEL PIN
025	PRP16M	ROLL PIN 3 X 25
027	P6202	BALL BEARING 6202ZZ
028	P1012028	UPPER WHEEL
029	P1012029	WHEEL PROTECTOR
030	P1012030	UPPER WHEEL GUARD (IN)
031	P1012031	STUD
032	P1012032	UPPER WHEEL GUARD (O)
033	PB41	HEX BOLT 1/2"-12 X 1 1/2"
034	PW01	FLAT WASHER 1/2"
035	PN06	HEX NUT 1/2"-12
036	PR21M	INT. RETAINING RING 35MM
037	PW06	FLAT WASHER 1/4"

REF	PART #	DESCRIPTION
038	P1012038	PIN
039	P1012039	HEX BOLT 5/8"-11 X 2 1/2"
040	PW14	FLAT WASHER 5/8"
041	P1012041	BASE
41A	P1012041A	BEARING HOUSING
042	PN04	HEX NUT 5/8"-11
044	P1012044	TABLE INSERT
45A	PRP44M	ROLL PIN 3 X 10
046	P1012046	TAPERED PIN
047	P1012047	TABLE
048	PB35	HEX BOLT 3/8"-16 X 2 1/2"
049	P1012049	TRUNNION CLAMP SHOE
050	P1012050	TRUNNION
051	P1012051	TRUN SUPPORT BRACKET
052	P1012052	LOCK KNOB FOR TABLE
52A	P1012052A	COVER KNOB
053	P1012053	INDICATOR
054	P1012054	GAUGE
55A	PB06	HEX BOLT 5/16"-16 X 2"
056	P1012056	HEX BOLT 3/8"-16
057	PN08	HEX NUT 3/8"-16
058	PW02	FLAT WASHER 3/8"
059	PB05	HEX BOLT 1/4"-20 X 3/4"
061	P1012061	LOWER SUPPORT BRACKET
062	PN01	HEX NUT 1/2"-20
063	P1012063	LOWER WHEEL SHAFT
064	P1012064	BLADE COVER
065	PK35M	KEY 5 X 5 X 20
066	P6205	BALL BEARING 6205
067	PR01M	EXT RETAINING RING 25MM
068	P1012068	LOWER WHEEL
069	P1012069	SPECIAL LEFT-HAND NUT
070	P1012070	LARGE PULLEY
072	PVA32	V-BELT A-32
074	P1012074	PAN HEAD SCREW

REF	PART #	DESCRIPTION
075	P1012075	SWITCH
076	P1012076	MOTOR
76A	P1012076A	CAPACITOR COVER
76C	PC400S	CAPACITOR
078	PK23M	KEY 5 X 5 X 25
079	PSS11	SET SCREW 1/4"-20 X 1/4"
080	P1012080	PULLEY GUARD
81A	PS04	PHLP HD SCR
082	P1012082	STAND FOOT
083	PCB02	CARRIAGE BOLT 5/16"-18 X 1/2"
084	P1012084	ADJUSTING PLATE – LONG
085	P1012085	ADJUSTING PLATE – SHORT
086	P1012086	STAND
087	PW07	FLAT WASHER 5/16"
088	PN08	HEX NUT 5/16" - 18
089	P1012089	MOTOR BASE
090	PB03	HEX BOLT 5/16"-18 X 1"
091	P1012091	SHAFT
092	P1012092	HOLDER BASE
093	PB24	HEX BOLT 3/8"-16 X 1 1/4"
094	P1012094	ADJUSTING ROD
095	P1012094	PULLEY
096	PR21M	INT RETAINING RING 35MM
98A	PVA31	V-BELT A-31
98B	PVA33	V-BELT A-33
099	PW14	FLAT WASHER 5/8"
100	PN04	HEX NUT 5/8" - 11
101	P1012101	FENCE RAIL
102	P1012102	FENCE RAIL SPACER
103A	PSB62	CAP SCREW 1/4"-20 X 1 1/2"
106	P1012106	LOWER WHEEL GUARD
107	P1012107	UPPER HINGE ASSEMBLY
108	P1012108	LOWER BEARING HOUSING
110	P1012110	RAIL PLUG
111	PLABEL-8	GRIZZLY LOGO PLATE

REF	PART #	DESCRIPTION
112	P1073171	DO NOT OPEN LABEL
113	P1073170	HANDS/BLADE LABEL
114	P1012114	WARNING/ID LABEL
115	PTS006	THUMB SCREW 1/4"-20 X 3/4"
117	PLN01	LOCK NUT 3/8"-16
118	P1012118	MITER GAUGE HANDLE
119	P1012119	SPECIAL WASHER
120	PS18	PHLP HD SCR 10-24 X 1/4"
121	P1012121	INDICATOR
122	P1012122	GAUGE BAR
125	P1012125	PIN
126	P1012126	GAUGE BODY
127	PN08	HEX NUT 3/8"
128	P4186Z308	REAR LOCK KNOB
129	P4186Z310	FRONT LOCK KNOB
130	P4186Z309	FRONT FENCE CLAMP
131	P4186Z306	CLAMP ROD
132	P4186Z303	REAR CLAMP
133	P4186Z301	ROLL PIN
134	P4186Z302	REAR FENCE BRACKET
135	PW06	FLAT WASHER 1/4"
136	PB19	HEX BOLT 1/4"-20 X 1/2"
137	P4186Z300	FENCE
138	P1012138	LOWER PULLEY
139	P4186Z206	ELECTRICITY WARNING
140	P1012140	STRAIN RELIEF
141	P1012141	POWER CORD
141A	P1012141A	MOTOR CORD
143	PS06	PHLP HD SCR 10-24 X 3/8"
144	P1012144	CORD CLIP
145	PB03	HEX BOLT 5/16"-18 X 1"
146	P1012146	RUBBER FEET
147	PRP52M	ROLL PIN 6 X 16MM
148	PR05M	EXT RETAINING RING 15MM